

# **GSK HOME GOLF IMPACT BOX**

## **Setup Manual EU/US Units**

**Version 1.30 - Y2020**

Golfsport Company KG  
Am Kanal 2a/5  
A-2482 Muenchendorf  
Austria

E-Mail Contact / Setup Assistance:  
[oliver@golfsport.company](mailto:oliver@golfsport.company)

## 1. Connect the Tubes:

In the Package Box 1 and 2 you find 45x45mm Tubes

6 x 150 cm = 4ft 11in = Label E

6 x 125 cm = 4ft 1in = Label A

2 x 120,5 = 3ft 11in = Label B

2 x 111 cm = 3ft 7in = Label C

2 x 130 cm = 4ft 3in = Label D

also you have

7 Flat Profile Steel connectors to connect the Tubes together.

You first connect this Tubes with the Tube Connectors!

So you have tubes of the below sizes ready to install.

You can see on the Sketch on Sketch Pages later in this document where the Tubes are Finally located

3 x 300 cm / 9ft 10in = 150 cm + 150 cm Tubes

2 x 250 cm / 8ft 2in = 125 cm + 125 cm Tubes

2 x 245,5 cm / 8ft 1in = 125 x 120,5 cm Tubes

2 x 130 cm / 4ft 3in = 130 cm Tube

2 x 111 cm / 3ft 7in = 111 cm Tube

= Use Tube E+E

= Use Tube A + A

= Use Tube A + B

= Tube D

= Tube C

Now you are ready to build the GSK Golf Box.





**E + E**  
3 x 300 cm  
9ft 10in

**A + A**  
2 x 250 cm  
8ft 2in

**A + B**  
2 x 245,5 cm  
8ft 1in

**D**  
2 x 130 cm  
4ft 3in

**C**  
2 x 111 cm  
3ft 7in



## 2. Sidewall Setup:

### Build this 2 Times for 2 Sidewalls:

Build the Sidewalls as shown with the 90° Angle connectors attached in each corner, as shown in the picture.

Reference on the Sketch Side View, how it finally should look.

It does not matter how you install the 90° Angle Connectors, inside or outside facing.

The distance on the top side to side is 120 cm / 3ft 11in

The distance on the floor side to side is 130 cm / 4ft 3in

You need following Tubes:

1 x 250 cm = 8ft 2in

1 x 245,5 cm = 8ft 1in

1 x 111 cm = 3ft 7in


1 x 130 cm = 4ft 3in

4 x 90° Connectors plus Screws

Please see the pictures and Sketch how to connect the 2 Sidewalls Bars to each other.



### Side View

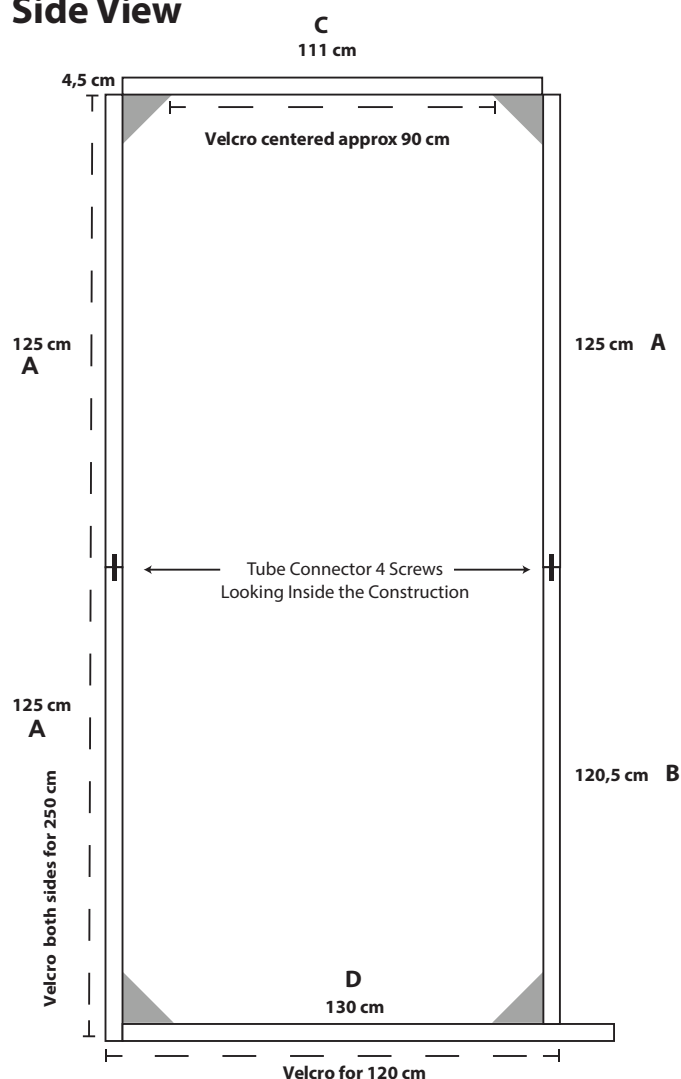



Please use now the delivered Velcro Tape and stick it as in the picture on the Sidewalls please see the Sketch and the Pictures for your Reference.






Now lift the sidewalls and connect with one 300 cm / 9ft 10in Tube on the Floor with both Side-walls as Shown in the 3 D Sketch Plan, and connect it with the 2 Angle Connector, the Angle Connectors should be mounted parallel to the Floor, as in the Picture below.

The Sides with the Velcro must face inside the Box

The Sidewalls should now stand themselves.

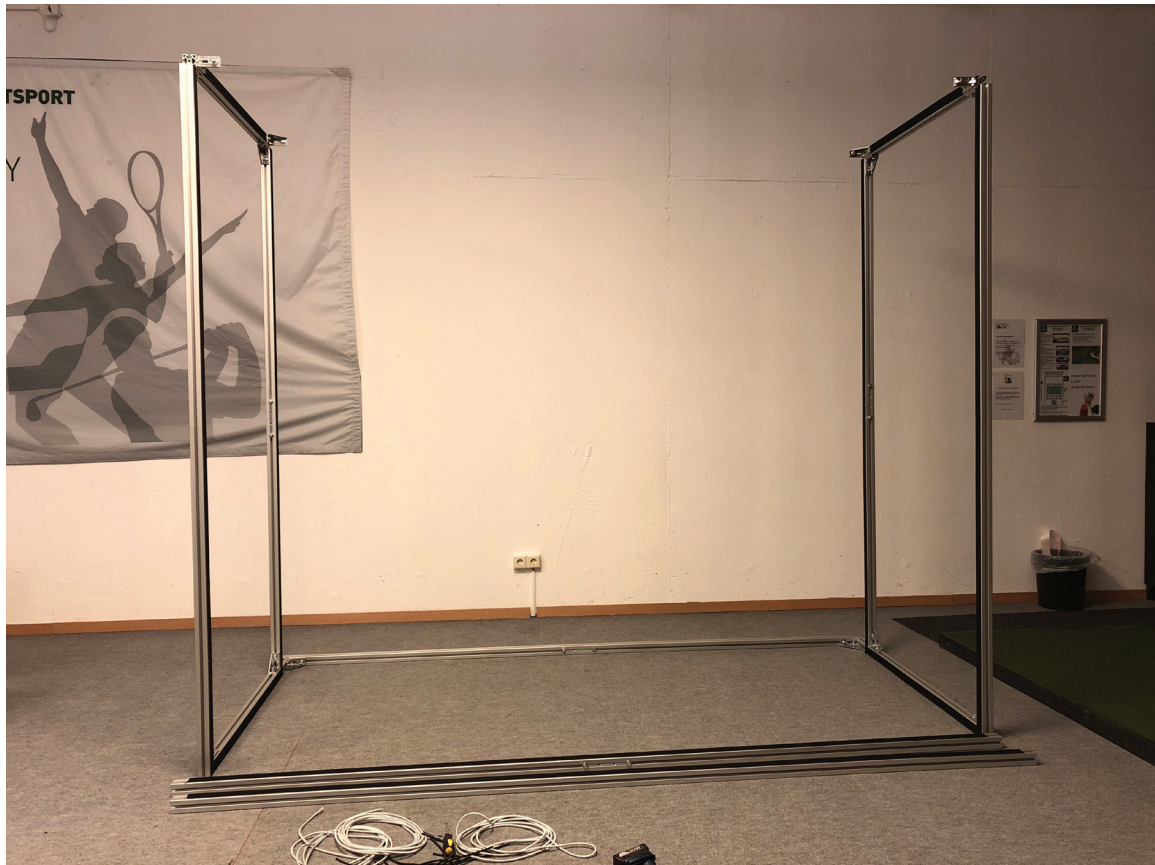



### TOP Tubes Mount:

Put 2 x 300 cm / 9ft 10in Tube on the Top of the Box and Connect this as well with Angle Connectors to the side walls.

See the Pictures and the Sketch 3D for Reference how the Tubes should be mounted.

Put Velcro Tape on the Top Tubes

Both Top Tubes Facing inside = Down to the Floor for 291 cm with Velcro

Back Tube where the Screen is mounted - Side Facing to ceiling for 300 cm with Velcro





## Fabric Install

### Sidewalls:

There are 2 Sidewalls, each dedicated to its own side.

Use the Velcro to put the Fabric on to the Sidewalls, start from the top and then stretch it out downwards.

The “Flausch” Velcro facing inside the Box has to be on the side where the Screen is mounted. Repeat that on the second side as well.





## Impact Screen NEW Version 2020 (within the EU from July 2019)

### VELCRO on the LEFT and RIGHT POLE - facing away from the Player on the Back the Velcro Hookband to the Aluminium

So you can fix the Sides of the Impact Screen to the Frame

#### Top / Upper Side:

Use the Hammerscrews approx 25mm Long, and 8 mm NUT, for the Fixed mount of the Impact Screen on the Top Bar. Hammerscrew through the Eyelet and mounting with the Nut. The Position of the Screen is directly full width of the Box, as you see in the Picture Below. Stretch then the screen and screw it on the Top Bar, so it is on Top as Flat as Possible.

#### Left / Right Sides:

Now velcro the Sides to the left and right Poles that already have the Loop Velcro on the Aluminium Tubes. Start from the Top and End up at the Bottom to have perfect Flat Screen.

#### Lower Latch:

Now Connect with the Black Fast Fix and through the Eyelets - the Screen and the Sidewalls so the Lower Latch of the Screen stays in Place. (Pic 1 on this page)



Pic 1.



## Roof

Now Install the Roof, the Latch must face towards the Impact Screen.

The Latch must be velcroed to the Roof before Putting it on the Poles.

See the pictures for an detailed install of the screen.


The Roof latches should prevent high Shots from hitting the top post and/or leaving the box itself.





## GSK Home Golf Box 2 x Sidewall Setup

Dimensions refer to an GSK Home Standard Box

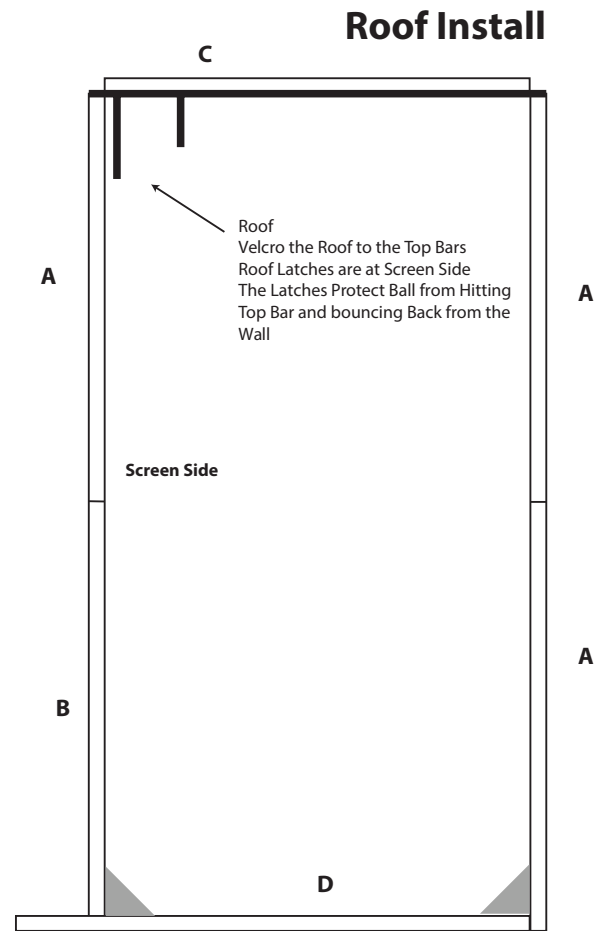

**Front view**

Diagram illustrating the front view of the bioreactor construction, showing dimensions and components.

**Dimensions:**

- Overall height: 125 cm (labeled A)
- Overall width: 125 cm (labeled A)


**Components and Labels:**

- Tube Connector 4 Screws Looking Inside the Construction (indicated by an upward arrow at the top center)
- Side Wall Fabric on Velcro on Inner Sidewall 10 cm supernatant latch at Screen Side (labeled on both the left and right sides)




GSK Home Golf Box  
Roof Setup

Back View

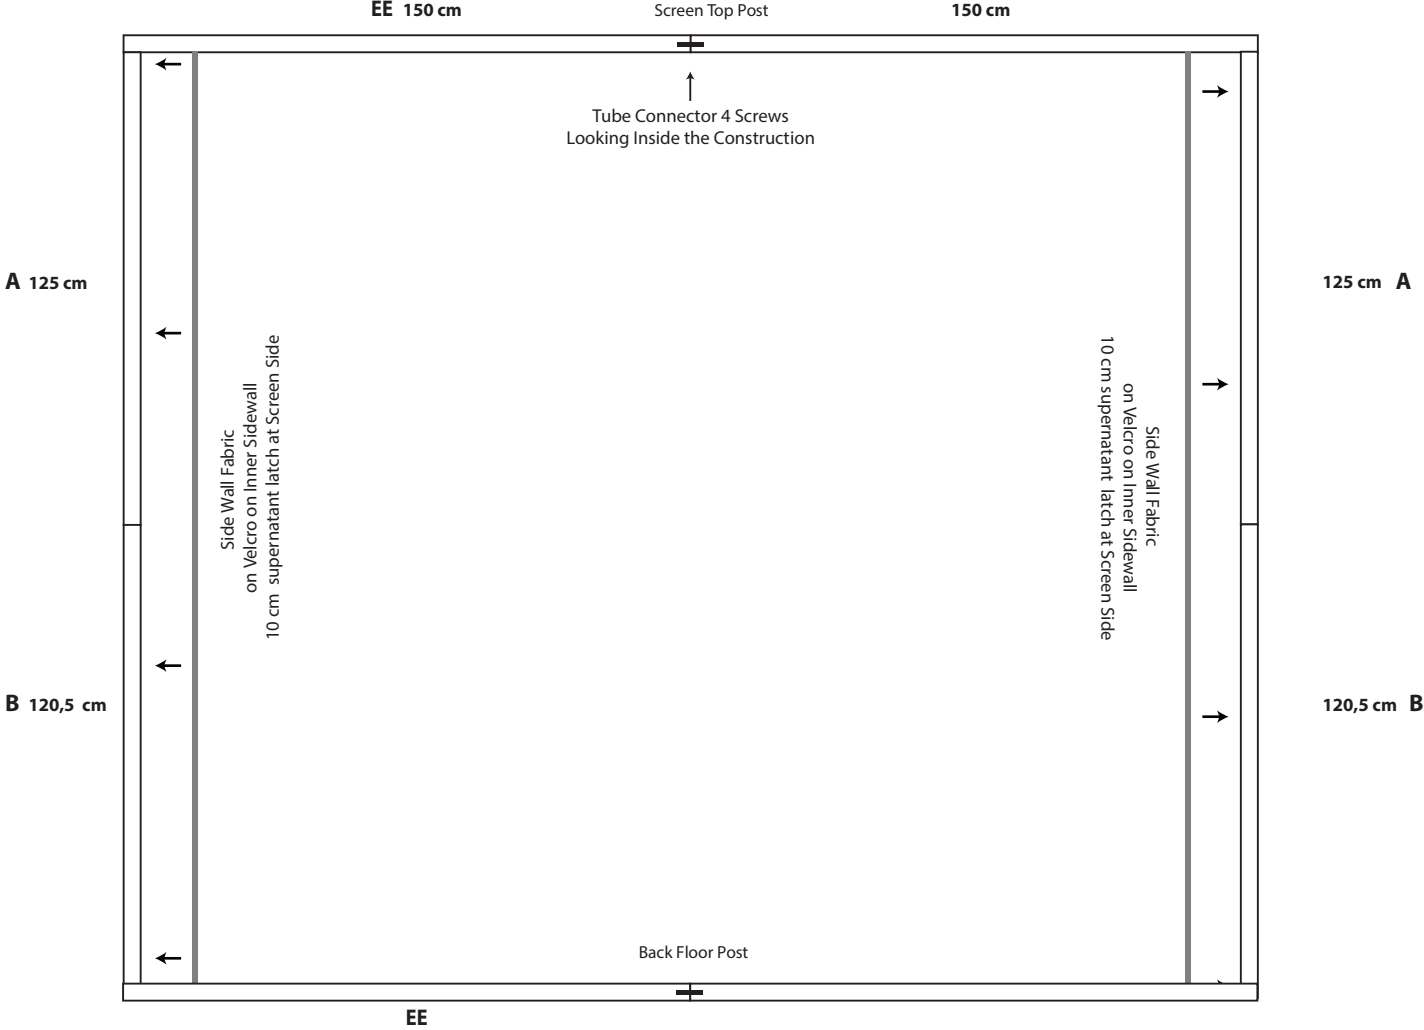


Top View

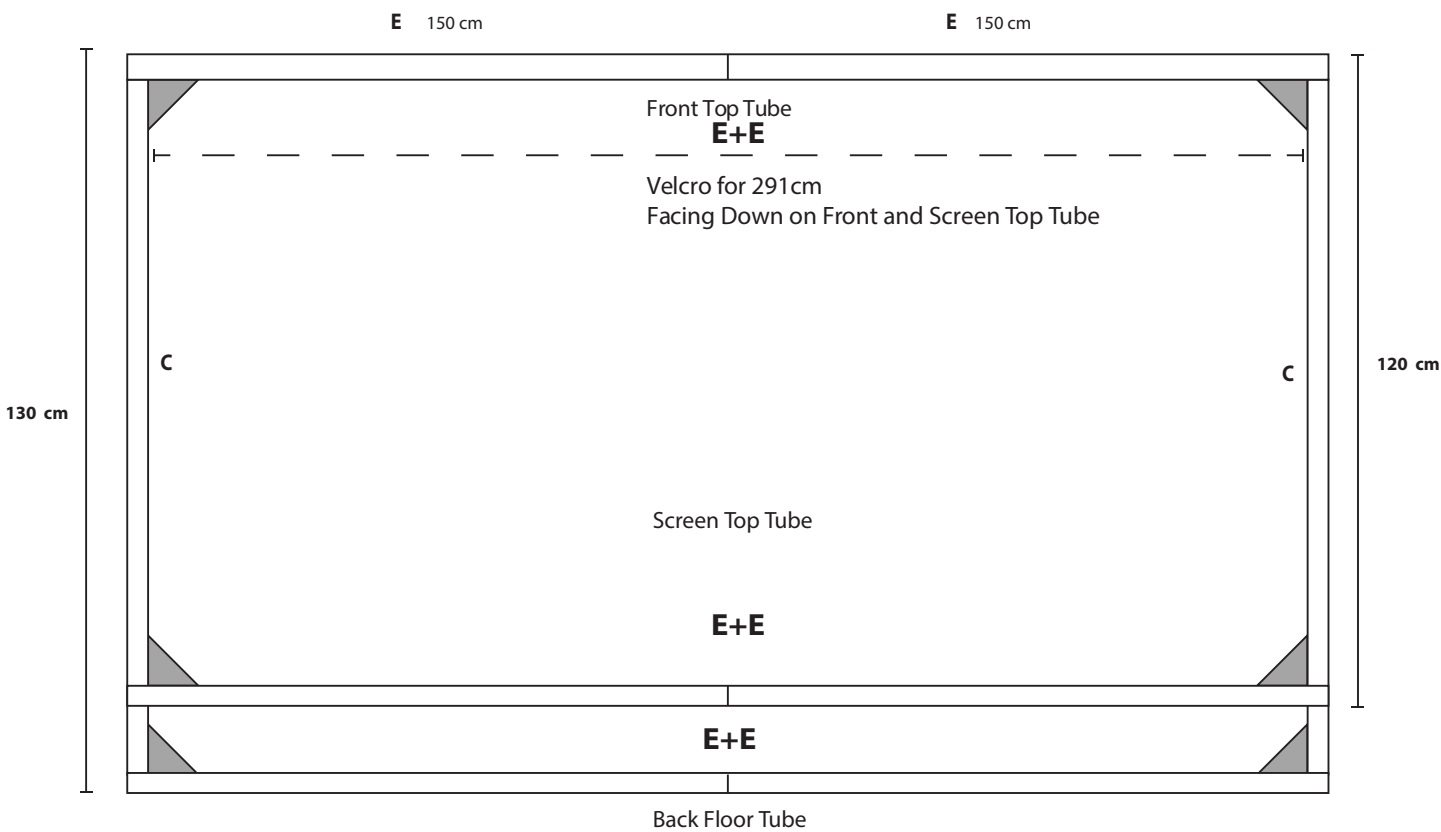




**GSK Golf Box  
Impact Screen Setup**

**Impact Screen Mounting Sketch Back View**

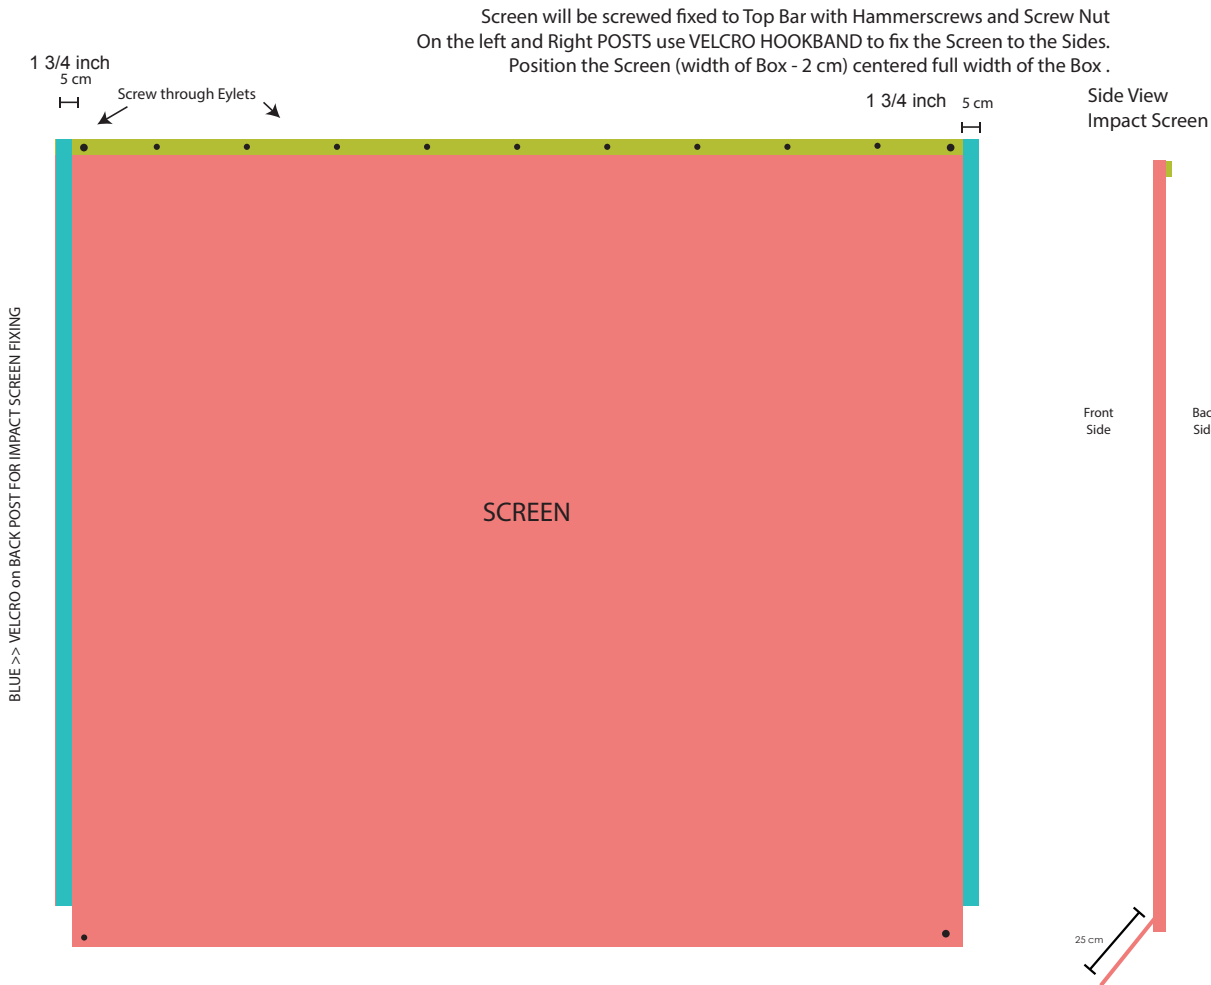

**3D Sketch GSK Impact Box**

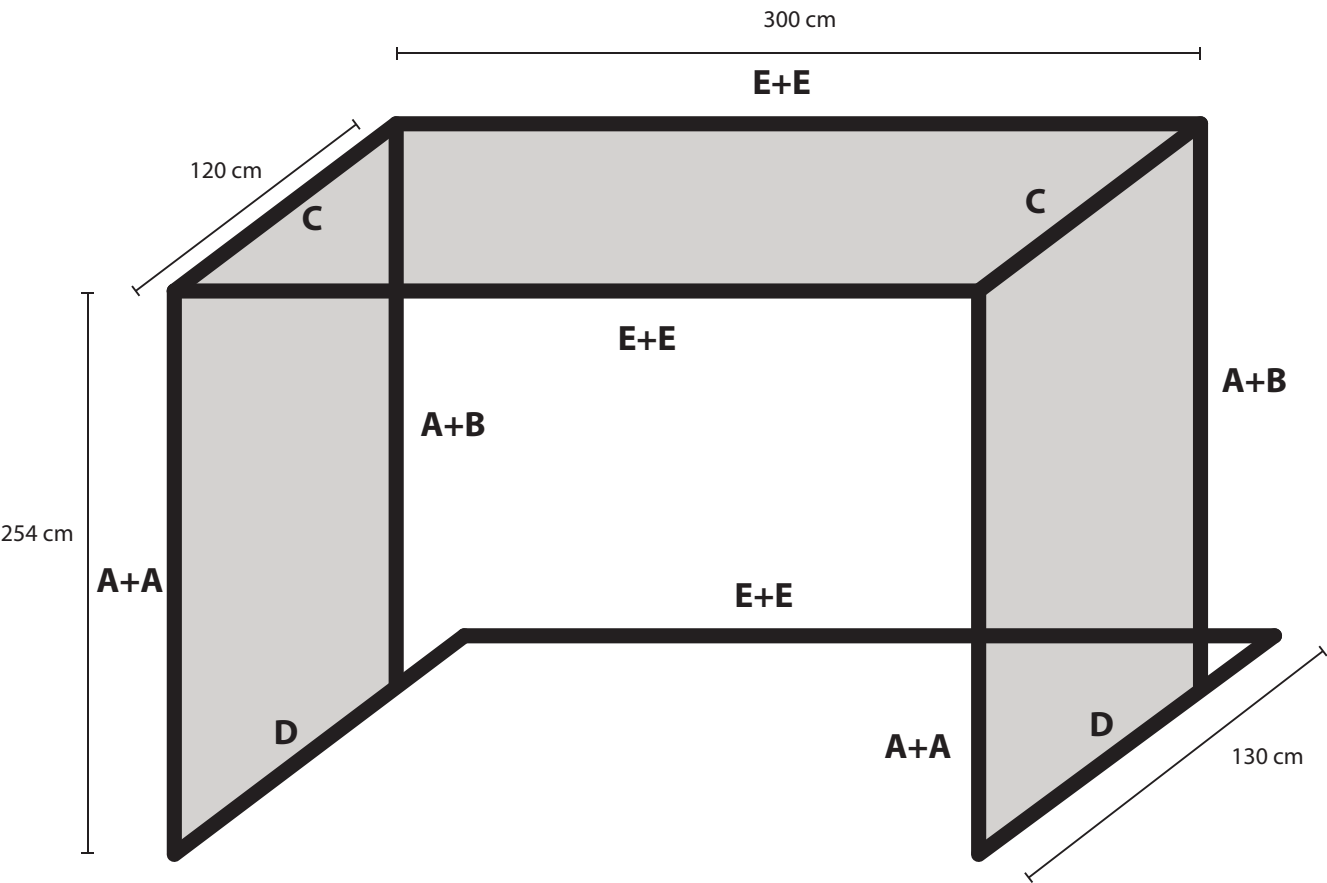



# **GSK 2020 HOME GOLF IMPACT BOX**

## **Youtube Setup Video Link:**

**<https://www.youtube.com/watch?v=-zOYlr6YxFc>**

### **Version 1.30 - Y2010**

Golfsport Company KG  
Am Kanal 2a/5  
A-2482 Muenchendorf  
Austria

E-Mail Contact / Setup Assistance:  
[oliver@golfsport.company](mailto:oliver@golfsport.company)